

**KENT**  
Smart Chef  
Appliances  
HOUSE of PURITY

Marketed by: KENT RO SYSTEMS LTD.  
E-6, Sector-59, Noida, U.P.-201309, India.  
E-mail: sales@kent.co.in | Website: www.kent.co.in  
Manufactured by: KENT RO SYSTEMS LTD.  
A-7, Sector-87, Noida-201305, U.P., India.  
Made in India

# KENT SANDWICH GRILL

Sandwich Maker & Multi-functional Grill

## Instruction Manual



GRILLED CHICKEN



GRILLED VEGETABLES



GRILLED FISH



GRILLED PANEER



**KENT**  
Smart Chef  
Appliances  
HOUSE of PURITY

# Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Sandwich Grill** performance and that it will serve you and your family's need without any compromise.

This guide would help you in getting the best out of your appliance. Please go through the booklet to familiarise yourself with its operation and maintenance.

Happy Living.

**KENT RO Systems Ltd.**

## TABLE OF CONTENTS

1. Introduction .....	1
2. Features of KENT Sandwich Grill .....	1
3. Know Your Product .....	1
4. Items in the Box.....	2
5. Using KENT Sandwich Grill .....	2
6. How to Operate .....	2
7. Cleaning & Maintenance. ....	2
8. Precautions.....	3
9. Important Safety Instructions .....	3
10. Troubleshooting.....	4
11. Technical Specifications .....	4

## INTRODUCTION

We, at KENT have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, the homes that we live in and air that we breathe.

Use of innovative technology and the support of a competent service network, have enabled us to create a brand which has become synonymous to well-being. Continuing with the tradition, we now present the KENT Sandwich Grill, a new age kitchen aid to make tasty and healthy snacks in the comfort of your home.

Save time and eat healthy using KENT Sandwich Grill, this is so easy to use that you'll put it to work every single day.

## FEATURES OF KENT SANDWICH GRILL

1. Non-toxic ceramic coating for healthy cooking
2. Multi-functional grill, toaster and sandwich maker
3. Ergonomic handle with automatic temperature cut-off
4. Easy to use, clean and store
5. Smooth lock mechanism

## KNOW YOUR PRODUCT



## ITEMS IN THE BOX

- |                        |   |     |
|------------------------|---|-----|
| 1. KENT Sandwich Grill | : | 1 N |
| 2. Warranty Card       | : | 1 N |

## USING KENT SANDWICH GRILL

1. Remove any stickers that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damages.
3. Before switching on the appliance, make sure that your home's mains voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT Sandwich Grill before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

## HOW TO OPERATE

1. Clean the parts before using.
2. Plug in the appliance and let it preheat for 2-3 minutes. While it is preheating, the LED power light will glow. Once it is ready, the light will turn off.
3. Open the lid. You may grease the surface with little oil.
4. Place the bread, snacks or any other desired ingredients.
5. Close the lid and let it cook for about 2-4 minutes, till the light turns off or until the bread turns golden brown (the time to cook will vary).
6. Once the snack is cooked, open the lid and take it out in a plate.
7. After cooking, unplug and let it cool before cleaning and storing.

**Note:** Never use metal tongs or a knife as these can cause damage to the ceramic coating.

## CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it
- Wipe the main unit with a moist cloth and non-abrasive liquid cleaner
- Do not immerse the appliance in water or any other liquid
- Never put any part of the appliance in the dishwasher
- After cleaning it thoroughly, dry it using a soft cloth
- Ensure that the appliance is completely dry before storing it

**Note:** Never immerse the unit in water, nor rinse it under the tap. Wipe it with a dry cloth.

## PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown
- The input voltage must not exceed the rating, it might damage the appliance
- Unplug before cleaning/moving the appliance
- Do not use the appliance with damaged power cord or plug
- Do not install the appliance near any heat source, e.g., heater
- If the appliance is not being used for longer time, unplug it
- Do not use the appliance when it is in recumbent or inclined position

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. After cooking, unplug and let it cool before cleaning and storing.
3. To reduce the risk of electric shock, do not use near or on wet surfaces.
4. Use the appliance only as described in the manual.
5. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own.
7. Keep cord away from heated surfaces.
8. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
9. To avoid electric shocks, do not use the appliance with wet hands.
10. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
11. This appliance is suitable for indoor use only.
12. Keep away from children.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.
The appliance suddenly stops working while running.	The appliance has overheated.	Let the appliance cool for 20 minutes before attempting to restart it.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.

## TECHNICAL SPECIFICATIONS

<b>Product</b>	<b>KENT Sandwich Grill</b>
<b>Product Code</b>	<b>116025</b>
<b>Net Weight</b>	<b>0.9 kg</b>
<b>Product Dimensions</b>	<b>261 (L) x 285 (W) x 78 (H)</b>
<b>Input Power Supply</b>	<b>Single Phase 230 V AC, 50 Hz, Class 1</b>
<b>Total Power Consumption</b>	<b>850 W</b>
<b>IP Rating</b>	<b>IPX0</b>